



Installation Instructions
for
Transfer Case Skid Plate
for
1999-2006 Toyota Tundra

Thank you for purchasing your new Skid Row Offroad transfer case skid plate. It is designed to give you peace of mind while traversing even the toughest trails.

Your skid plate package should come complete with the following parts:

1. (1) Transfer Case Skid Plate
2. (4) 3/8-16 UNC x 1.5" Hex Head Bolts
3. (2) 3/8-16 UNC x 3" Hex Head Bolt
4. (4) 3/8-16 UNC Hex Nut
5. (6) 3/8" Lock Washers
6. (2) 3/8-16 Nut Plates

Step 1: Lift the new transfer case skid plate into place as shown to the right. There should be existing holes in the chassis in locations 1 and 2 indicated by the arrows.

Step 2: Install two 3/8-16 UNC x 1.5" hex head bolts, lock washers, and nuts into the holes indicated by the arrow 1. Leave the bolts loose.


Step 3: Install the two 3/8-16 UNC x 3" hex head bolts, lock washers, and nut plates through the transmission cross-member shown by arrow 2 and then tighten. The nut plates go on top of the cross-member.

Step 4: Tighten the two bolts from step 2.

Step 5: Drill two 3/8" holes through the chassis using the holes in the skid plate as a guide in the area indicated by arrow 3.

Step 6: Install the remaining 3/8-16 UNC x 1.5" hex head bolts, lock washers, and nuts and tighten.

Step 7: You're ready to hit the trail!

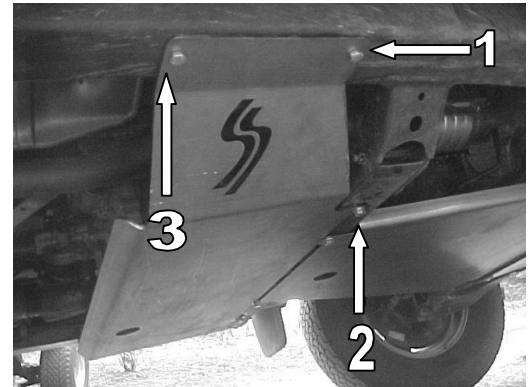

We hope you enjoy your new Skid Row Offroad transfer case skid plate!

Sincerely,

The Staff at SFK Manufacturing, LLC

SFK Manufacturing, LLC
PO Box 306, Shermans Dale, PA 17090
Phone 717-701-8315
Fax 717-701-8316

www.SkidRowOffroad.com